



255 West Burr Blvd., Kearneysville, WV 25430  
304.725.6921 (phone) 304.725.6983 (fax)

# IMPORTANT SETUP INSTRUCTIONS

## Card Reader Antenna

The antenna used with the Credit Card Reader has been shipped as shown in Figure 1 below.



Figure 1

(Over)

If necessary for better reception, drill a 1/4" hole in the top of the door as shown in Figure 2 making sure to prevent drill chips from falling onto the Electronics. Detach the antenna at the rear of the Card Reader as shown in Figure 3 and move it to the top of the machine. Leave the antenna cord uncoiled, feed it through the hole and reconnect it to the Card Reader. Use a sealant such as RTV in order to seal the hole.

**IMPORTANT!**

**NEVER LEAVE THE ANTENNA INSIDE THE MACHINE NEAR THE CONTROL BOARD**

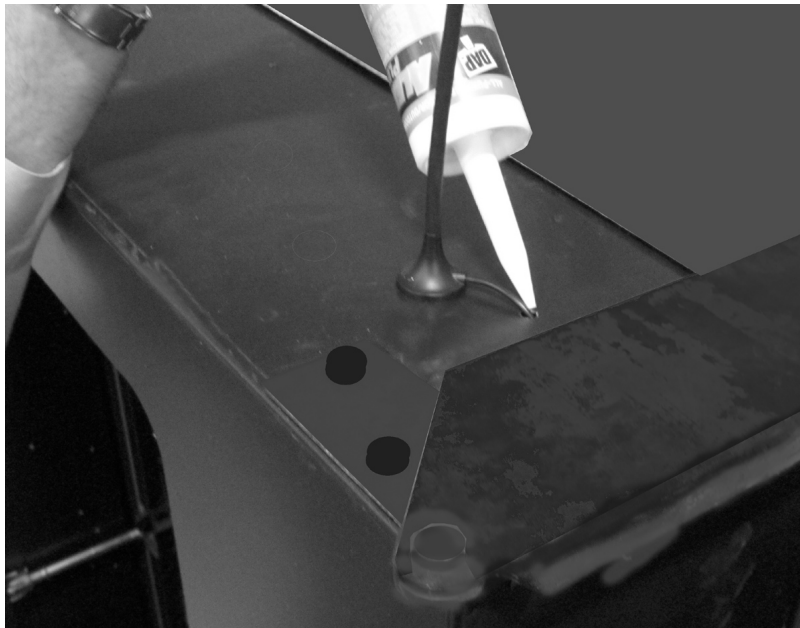


Figure 2

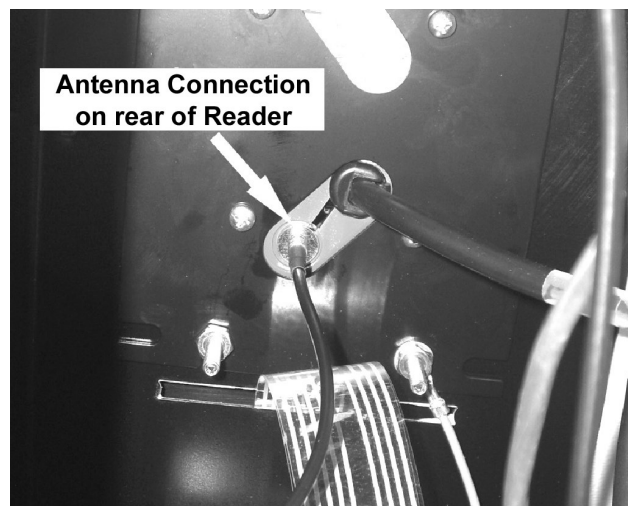


Figure 3